

Classic Menu Items Status, Charge, Mode, Aux, Misc, Logs, Tweaks, Temps and Net

STATUS MENU

- Main Status One - KWH
 - IN
 - BAT
- Main Status Two - Ahr
 - IN
 - BAT
- Main Status Three - VOC, V, Amps
 - IN
 - BAT
- Whizbang Junior Shunt
 - (R) — Capacity
 - Efficiency
 - (R) — Deg C
 - %
 - (L) — Lifetime AH Reading
- Short Term History
 - Power
 - W
 - 00:00
 - Log
- Moon Scope
 - V In
 - V Battery
- About Classic
 - Software Version
 - Nominal Battery V
 - Classic Version

CHARGE MENU


- Volts
 - EQ - Volts
 - Absorb - Volts
 - Float - Volts
- ChgTime
 - Absorb Hrs: Mins
 - Time - 00:00
 - EQ - 00:00
 - (R) — Timer View Min:Sec
 - (R) — Timer View Hrs:Min
- T-Comp
 - Comp-Mv/Deg C/Cell
 - Disable /Mv
 - EQ Comp'D
 - (R) — Temp Comp Set Point - Volts
- EQ
 - Equalization Menu -
 - EQ Stopped/EQ Started
 - (R) — Auto Equalize Setup
 - Internal
 - Re-Try
 - (R) — Auto Equalize Setup
- Advanced
 - Ending Amps
 - Rebulk - Volts
 - SKP - Days
 - (L) — Clasc/Shunt
- Limits
 - Output - Amps
 - Input - Amps
 - Mint - Comp - Volts
 - Max - Volts
 - (R) — Hi Batt - Temp C

(R) Symbolizes pushing the Right Soft Key

(L) Symbolizes pushing the Left Soft Key

WARNING! The Classic's USB port is NOT isolated from battery negative. This is typically only an issue on positive ground systems or systems with a tripped ground fault protection device. Care must be taken that a computer connected to the Classic's USB port is either isolated from ground and the Classic's negative or that the computer's USB negative is common with the Classic's negative and ground.

Left Soft Key

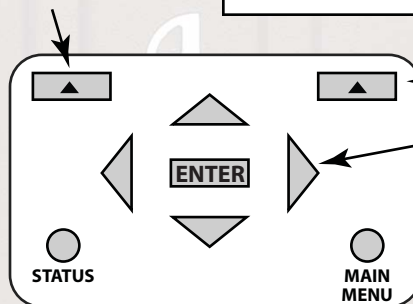

Right Soft Key

Directional Arrow Keys


CLASSIC KEY PAD

CLASSIC MENU MAP

MidNite Solar Inc.


2 of 4

AUX MENU

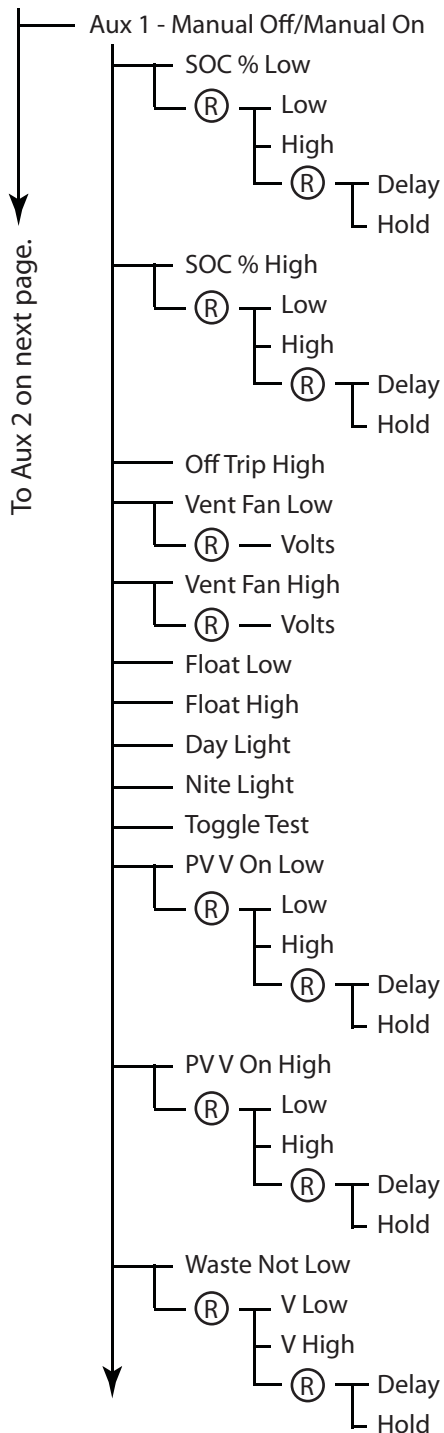


AUX 1 - CONTINUED

MODE MENU

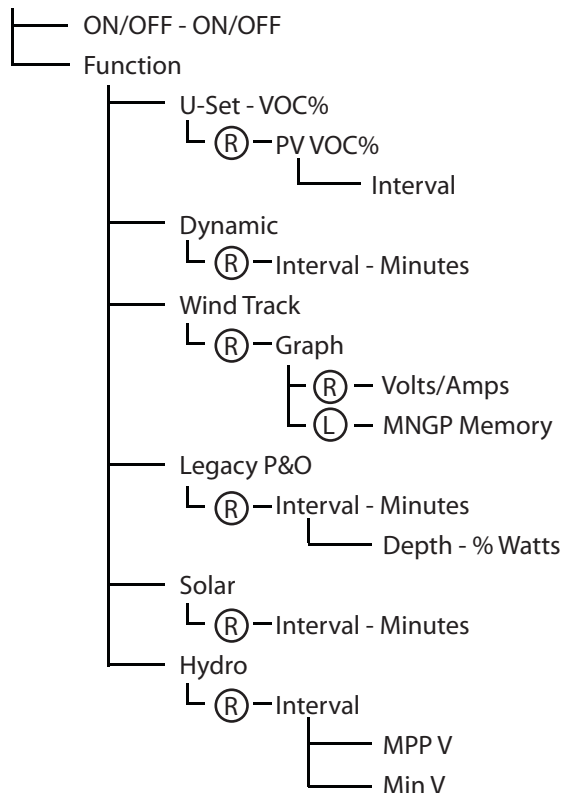

AUX 1 - CONTINUED

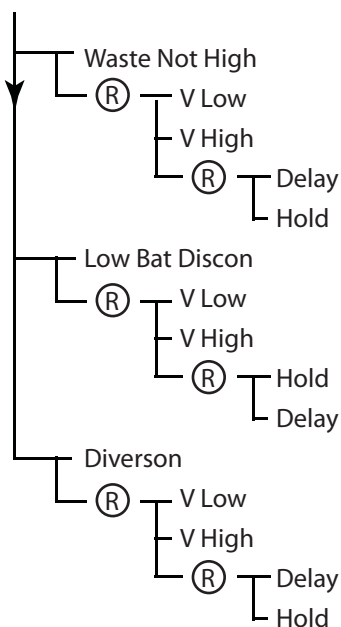

(R) Symbolizes pushing the Right Soft Key
(L) Symbolizes pushing the Left Soft Key




www.midnitesolar.com

17722 - 67th Ave NE Arlington, WA 98223 PH. 360-403-7207 Fax 360-691-6862


Continued from previous page.

AUX MENU

Aux 2 - Manual Off/Manual On

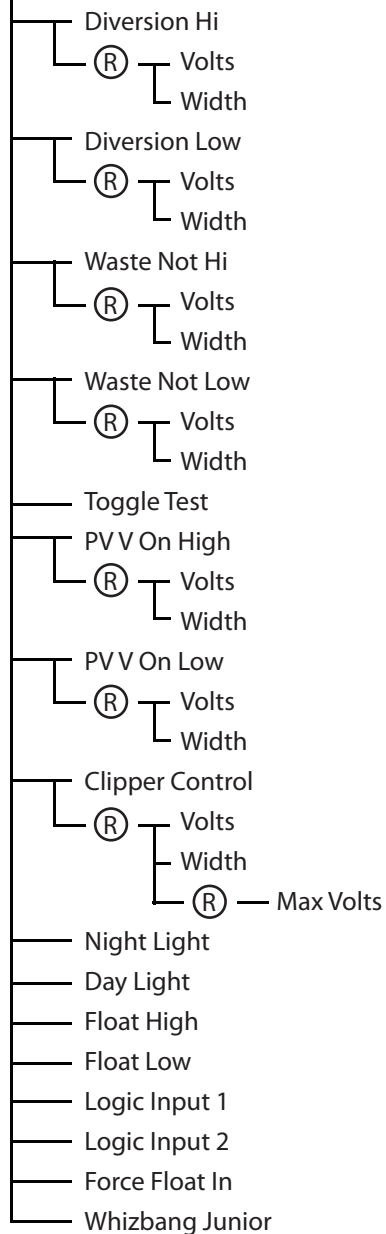

MISC MENU

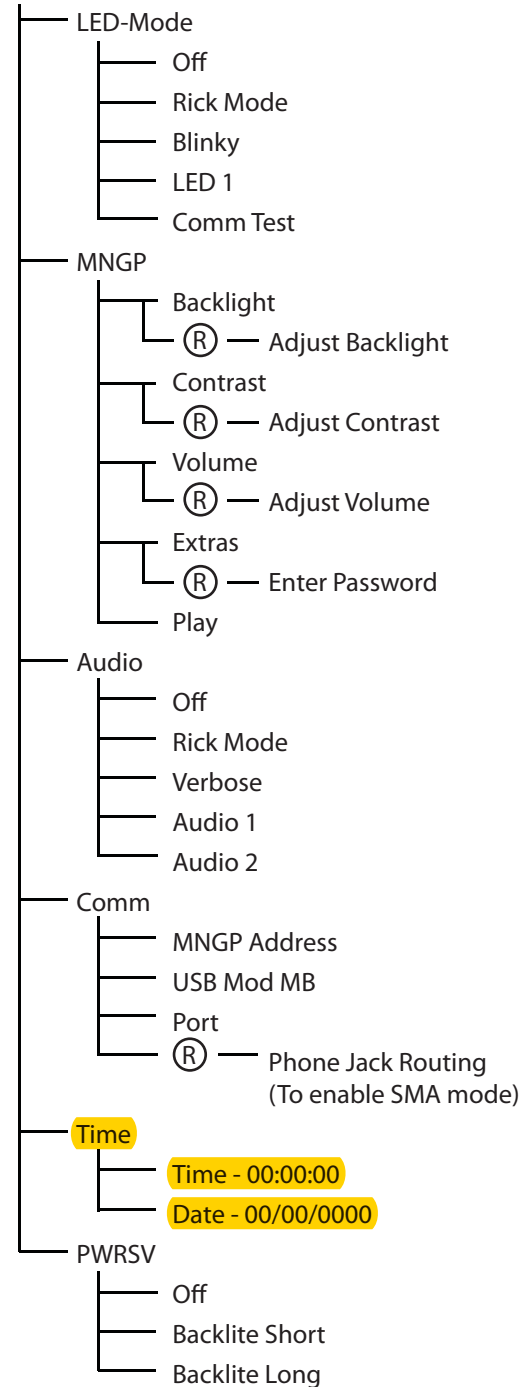

(R) Symbolizes pushing the Right Soft Key

CLASSIC MENU MAP

MidNite Solar Inc.

4 of 4

TEMPS MENU

- Remote FETS

NET MENU

- Mode
 - Static
 - DHCP
 - (R) — GW: X.X.X.X.
 - D1: X.X.X.X.
 - MM: X.X.X.X.
- IP: X.X.X.X.
- SN: X.X.X.X. — (R) — Web Access:
 - Disable/Enable
 - Mac Address
 - Device ID

TWEAKS MENU

- Offset VBatt
- Offset Vpv
- (R) — GF - On/Off
 - LMX 0 On/Off
 - Blk- hold up arrow to force bulk
 - Fit- hold up arrow to force float
 - (R) — ARST - On/Off
 - A-EQ-R
 - DvrtCnt - On/Off
 - (R) — Insomnia - On/Off
 - Nitelog - On/Off
 - Shade - On/Off
 - TMSYNC - On/Off
 - (R) — Followme - On/Off
 - BTS-NET - Master/Follow
 - PSWD - On/Off
 - WBRST - Yes/On
 - (R) — Mode
 - Time
 - Swnstvy

LOGS MENU

- History
 - Clear
 - Daily Logs
 - Hourly Logs
 - Lifetime LW Hours
 - Lifetime Amp Hours
 - WB Jr. Net Amp Hours
 - WB Jr. Pos Amp Hours
 - WB Jr. Neg Amp Hours
- (L) — Daily
 - Hi Fet T
 - Hi Vpv
 - Hi Vbatt
 - kW Hours
 - Float T
 - Hi Power
- (R) — Hourly
 - Power
 - V In
 - V Batt
 - Stage
 - Amps Out
 - kW Hours
 - (R) — Graph

(R) Symbolizes pushing the Right Soft Key

(L) Symbolizes pushing the Left Soft Key



www.midnitesolar.com

17722 - 67th Ave NE Arlington, WA 98223 PH. 360-403-7207 Fax 360-691-6862