


Proper Pinout for the Solar Assistant USB to CANBUS cable

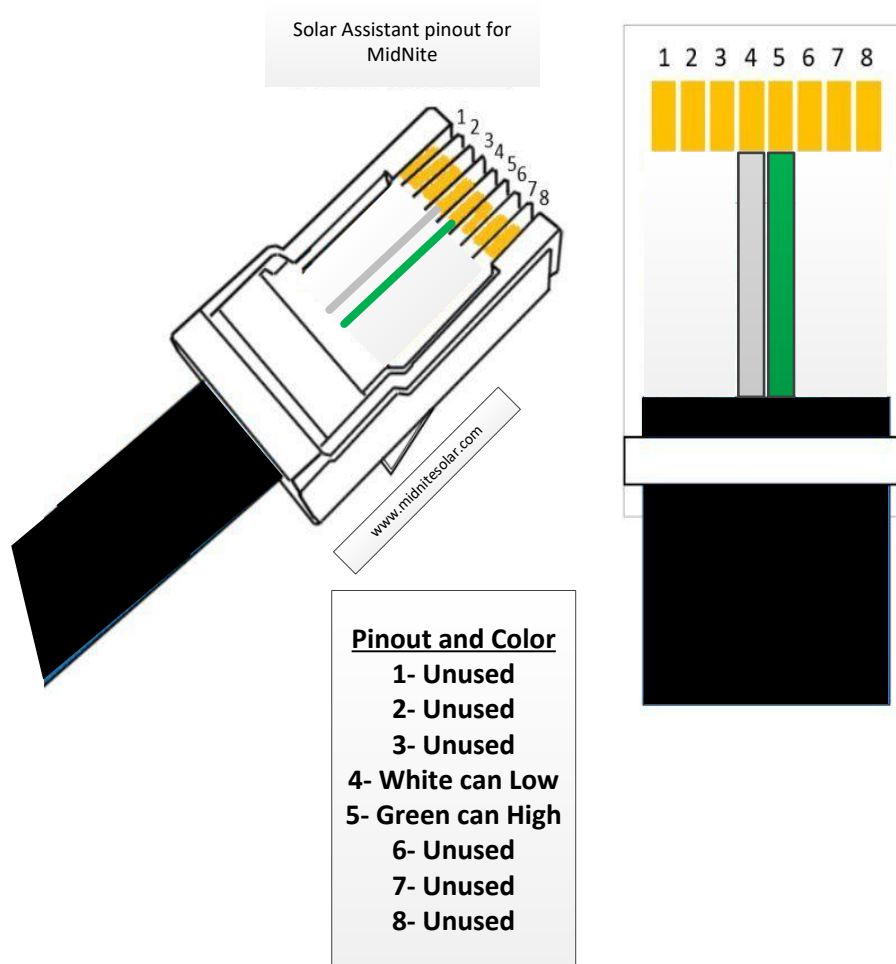

To connect the Solar Assistant to the Midnite Rosie / MNGP2 / Hawke's Bay or Barcelona simply unplug one of the blue terminator plugs on one end of the canbus in the system and plug in the solar assistant cable.

NOTE: the USB cable that comes with the Solar Assistant is NOT a canbus converter you MUST purchase the USB to CAN cable seperately

NOTE: It does not matter which terminator you replace

NOTE: The Solar Assitant terminates the canbus on that end once the terminator is replaced